 




# DeWalt DC970 Battery Fuse Replacement

If your battery charger is not charging the battery of the drill there may be a blown fuse in the charger. I recommend following this guide to replace the fuse.

Written By: Antonia Thomas

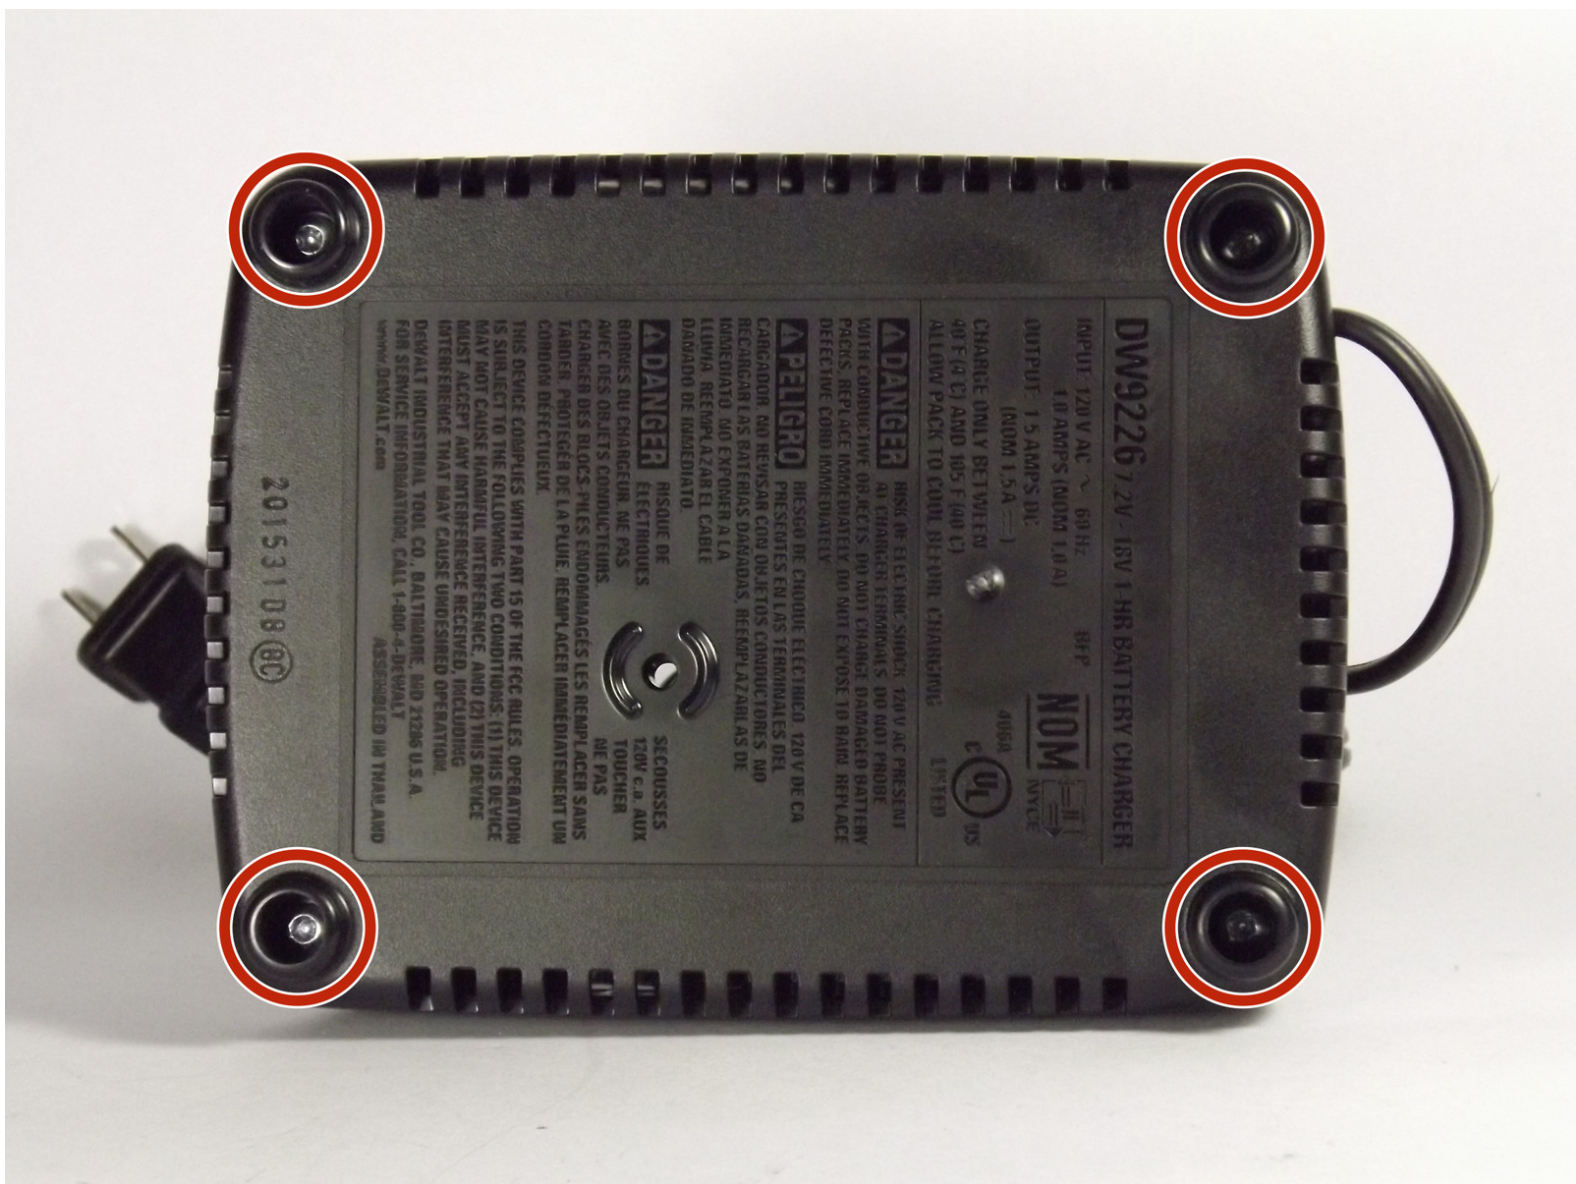

## INTRODUCTION

If you realize your battery charger for your drill is not charging, there may be a blown fuse which can be replaced by following this guide.

 
---



### TOOLS:

- [T15 Security Torx Screwdriver](#) (1)
  - [Torque Wrench](#) (1)
  - [T10 Torx Security Bit Screwdriver](#) (1)
-

## Step 1 — Battery Fuse

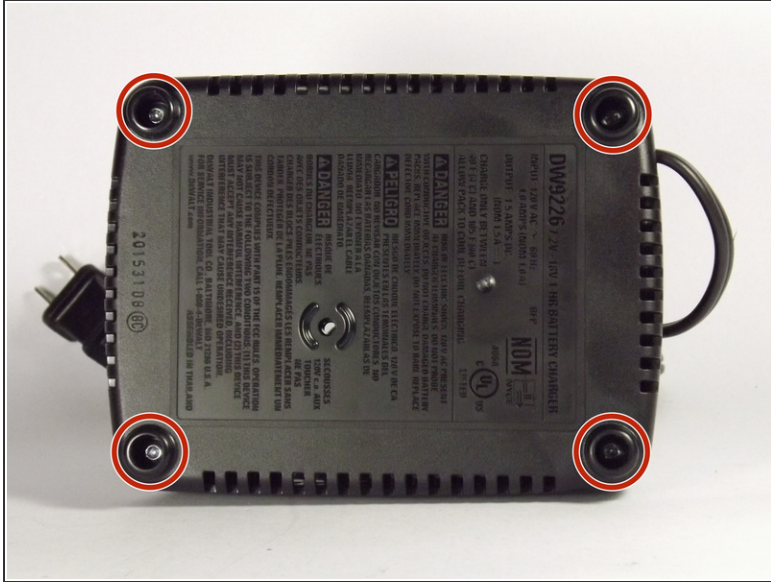

- Remove the four 13 mm, Torx Security #15 screws found on the bottom of the charger.

## Step 2




- Remove the 19 mm, Torx Security #10 screw found in the charger port.
- Then pull the top of the charger off separating it from the bottom.




## Step 3



 Locate the fuse and pull it out with two fingers.

- Once you have located the fuse, if you have the replacement fuse just pull the old one out and put the new one in.

 Replacement fuses can be found in hardware stores.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 03:57:56 AM.